

# Instructions



## Instructions

**Do not use pump without solvent.**

- 1) Disconnect electrical and hose connections.
- 2) Remove tank with pump installed.
- 3) Remove pump and seal then clean and flush tank.
- 4) Turn the bottom half of pump to match original pump and connector orientation.  
Obtain a better grip by using a shop rag. Do not use pliers.
- 5) Install new seal and pump.
- 6) Refit tank and attach electrical and hose connections.
- 7) Fill tank with proper solvent and prime the pump by activating 4 to 6 times.