

INSTALL/REMOVAL INSTRUCTIONS: WINDOW REGULATOR

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

Removal Instructions

STEP 1: Remove the interior door trim retaining screws (see photos for reference).




INSTALL/REMOVAL INSTRUCTIONS: WINDOW REGULATOR


ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

STEP 2: Once the interior door trim panel retaining screws have been removed, lift the door panel in an upward motion to release the door trim panel from the door.

STEP 3: Disconnect the door latch rod from the interior door handle.

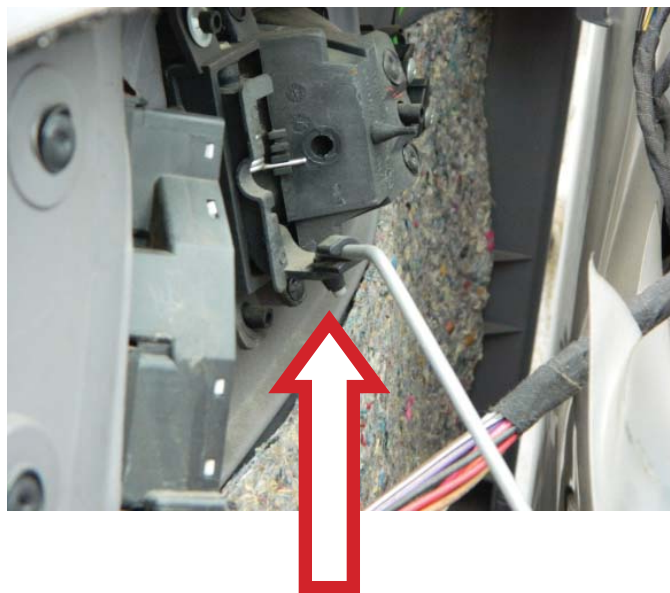

STEP 4: Disconnect the master power switch assembly.

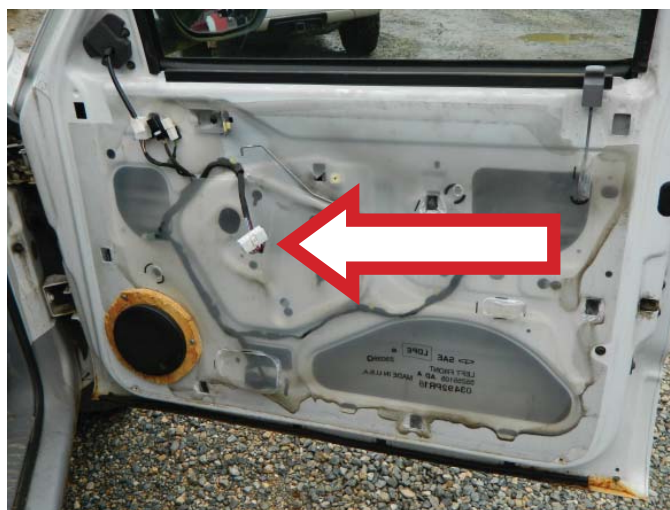

INSTALL/REMOVAL INSTRUCTIONS: WINDOW REGULATOR

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

STEP 5: Remove the door speaker assembly.

NOTE: The picture shows an aftermarket speaker. Your vehicle's speaker will not look like the one in the picture.



STEP 6: Remove the water vapor barrier.




STEP 6a: Temporarily connect the master power switch assembly and lower the window glass to expose the window regulator mounting screws. Remove the mounting screws.

INSTALL/REMOVAL INSTRUCTIONS: WINDOW REGULATOR

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.


STEP 6b: Once the door glass has been disconnected from the window regulator, push the glass into the up position and hold in place with either a saddle cup assembly, tape, or wedge.

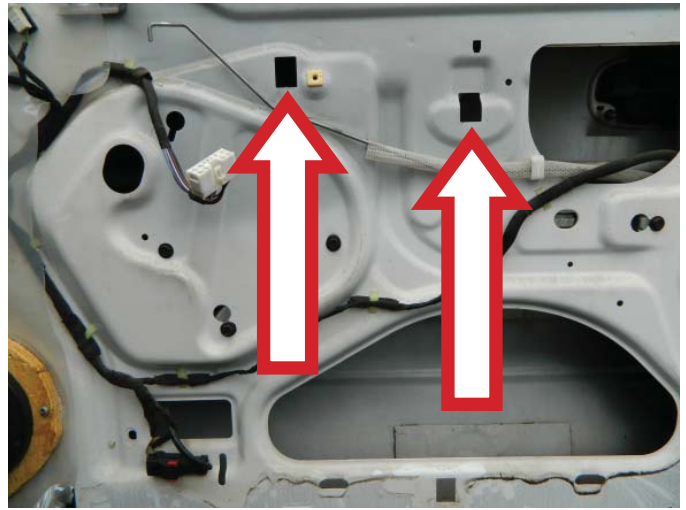

STEP 7: Disconnect the window lift motor connector.




STEP 8: Remove the power window regulator attaching hardware.

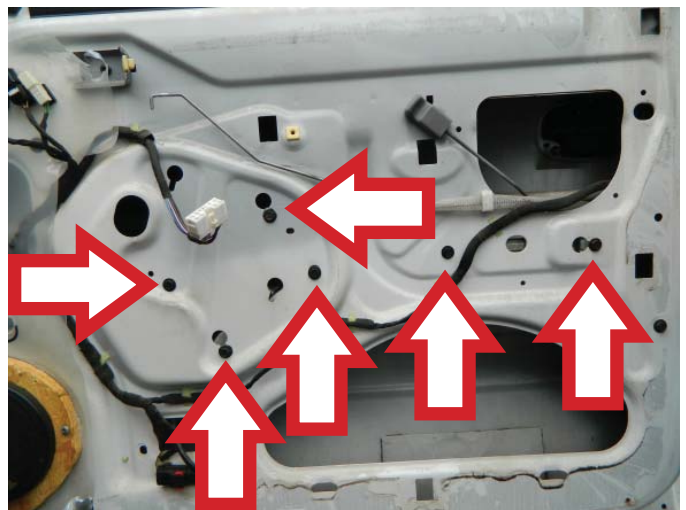

INSTALL/REMOVAL INSTRUCTIONS: WINDOW REGULATOR

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

STEP 9: Remove the window regulator through the access hole.

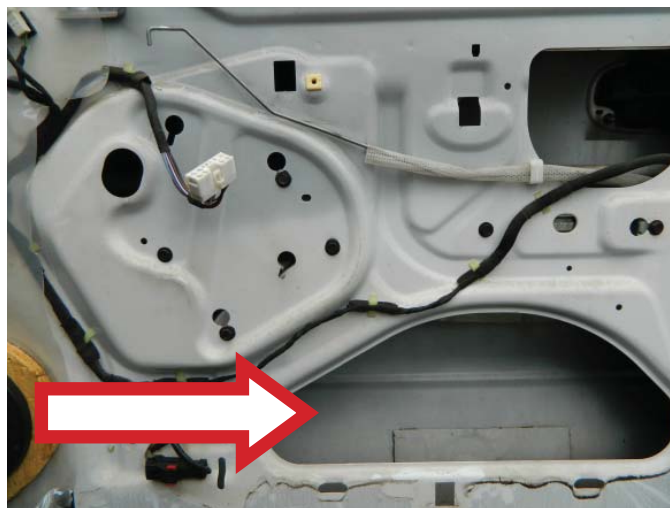

STEP 10: Remove the window lift motor attaching hardware. **WARNING:** USE EXTREME CAUTION WHEN REMOVING THE WINDOW LIFT MOTOR FROM THE WINDOW REGULATOR, THE PRETENSIONER SPRING IS UNDER PRESSURE. IT IS ADVISED THAT YOU REMOVE THE PRETENSIONER SPRING FIRST BEFORE LOOSENING THE WINDOW LIFT MOTOR.

INSTALL/REMOVAL INSTRUCTIONS: WINDOW REGULATOR

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.


Installation Instructions

STEP 1: Attach the window lift motor to the window regulator.

STEP 1a: Place the window regulator through the access hole.




STEP 2: Attach the window regulator to the door using its attaching hardware.

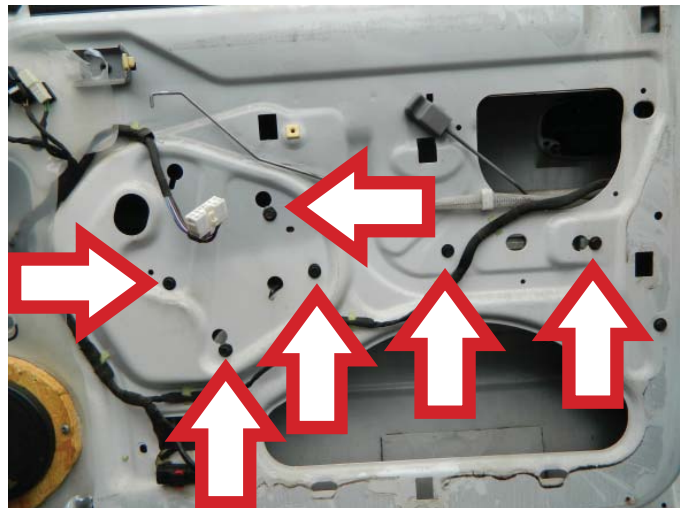


INSTALL/REMOVAL INSTRUCTIONS: WINDOW REGULATOR

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

STEP 3: Connect the window lift motor connector.

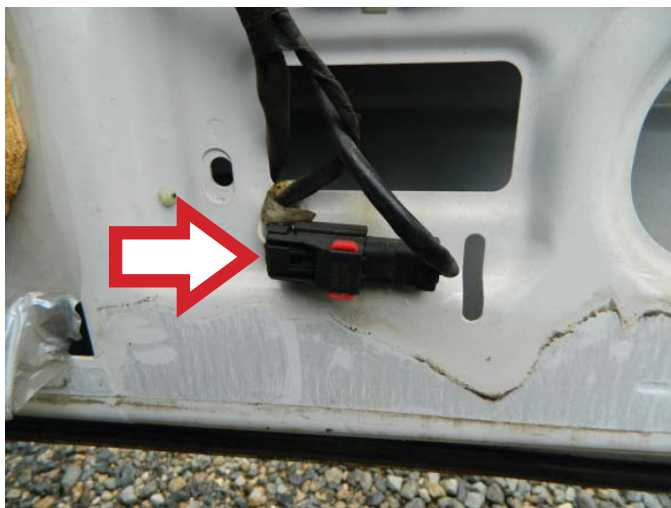

STEP 4: Temporarily install the power window switch so that you can lower the door glass to meet the attaching mounts on the window regulator.

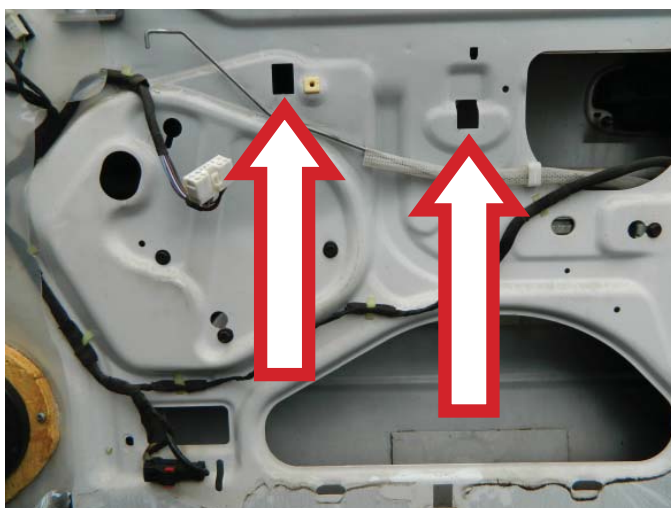

STEP 4a: Attach the window glass to the window regulator.

INSTALL/REMOVAL INSTRUCTIONS: WINDOW REGULATOR

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

STEP 5: Install the water vapor barrier.




STEP 6: Install the door speaker.



INSTALL/REMOVAL INSTRUCTIONS: WINDOW REGULATOR

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

STEP 7: Install the interior door handle latch rod.

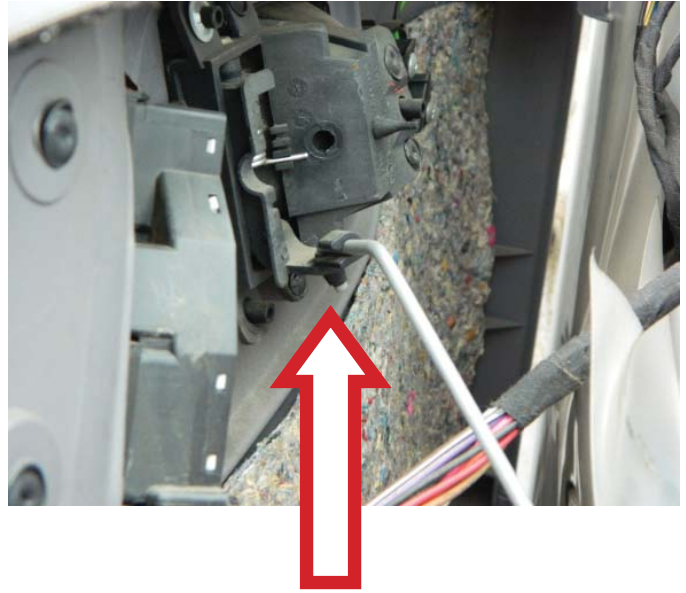

STEP 8: Connect the master power window switch assembly.

STEP 9: Align the interior door trim panel with the corresponding holes in the door.

NOTE: Be sure to insert the door lock handle through the corresponding hole in the interior door trim panel.

INSTALL/REMOVAL INSTRUCTIONS: WINDOW REGULATOR

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

STEP 10: Tighten the interior door trim panel retaining screws (see photos for reference).



STEP 11: Verify that all of the interior door trim panel retaining screws are tight and that the window regulator is operating properly.