

# E4-WM5-Y182A00

## MOUNTING INSTRUCTIONS



### Remove

Place vehicle on a chassis hoist, lift it and remove wheel



***The lower control arm must be supported by suitable means!***

Remove top and bottom mount.


Remove complete shock absorber.

### Install

Fit BILSTEIN shock absorber to the vehicle in reverse sequence of removal.

All rubber-mounted strut/ damper attachments must not be fully tightened until AFTER the suspension system is loaded (wheels on the ground). Other mounting fasteners (for example brackets) must be securely tightened BEFORE load is placed on the suspension system.

	M8	M 10	M 12	M 14	M 16	List
						Thread
	13	25	45	72	110	Torque Nm
	10	19	34	54	83	Torque ft lb

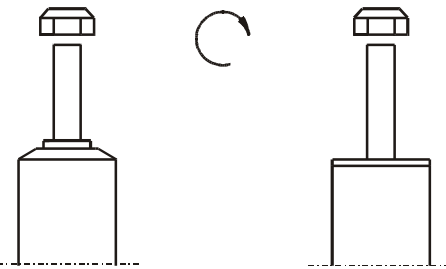

For the torque and retorque of nuts the use of an impact screwdriver is not allowed because this would destroy the wrench. Self-locking nuts must only be **used once**