

E4-WM5-Y303A00

MOUNTING INSTRUCTION



Remove

Place vehicle on a chassis hoist,
lift it and remove wheel



The lower control arm must be supported by suitable means!

Remove bottom mount.

Remove top fixing nuts from support bearing.
Do not remove centre nut at this time!

Remove complete shock absorber and
clamp it in an appropriate strut vice.

Compress suspension spring until tension on support bearing is released.

Release centre nut and remove original mounting parts. Please refer to diagram to identify which parts will be replaced with BILSTEIN- supplied components.

Install

Assemble BILSTEIN and/ or original mounting parts on BILSTEIN shock absorber in reverse sequence of removal.

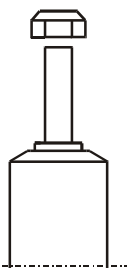
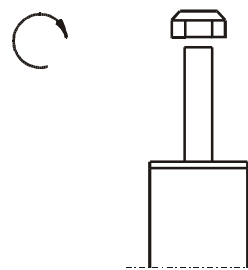
Before releasing the spring, care is to be taken to ensure that the ends of the spring rest in the cut outs of the top and bottom spring pads.

Fit assembled shock absorber to the vehicle in reverse sequence of removal.

**All Drawings are generalized!
brackets, etc. specific
to strut are not shown!**

**Do not use an impact tool to loosen
or tighten fasteners due to possible
damage to the product.
Self- locking nuts must only be
used once!**

						List
	M 8	M 10	M 12	M 14	M 16	Thread
	13	25	45	72	110	Torque Nm
	10	19	34	54	83	Torque ft lb

E4-WM5-Y303A00
MOUNTING INSTRUCTION



without PASM

with PASM

