

REMOVAL/INSTALL OF TAILGATE MOLDING (924-572)
Ford F-SUPERDUTY 2015-08

**PLEASE WEAR
SAFETY GLASSES!**

Included parts:

- Tailgate molding

Tools required for removal and installation of tailgate molding:

- Work Gloves
- Safety Glasses
- Tape Measure
- Marker or Scribe
- 11/32" Drill Bit (step drill bit is preferred)
- Power Drill

Instructions

STEP 1: If your OEM Tailgate Molding has the 5 installation holes as shown in figure 1, please follow steps 2 through 5 to add the four remaining holes to the new molding. If your OEM Tailgate Molding does not have the 5 installation holes, please disregard these instructions.




Figure 1: Tailgate Molding with 5 installation holes

STEP 2: Using a tape measure and marking device, mark the two left side hole locations as shown in Figure 2.

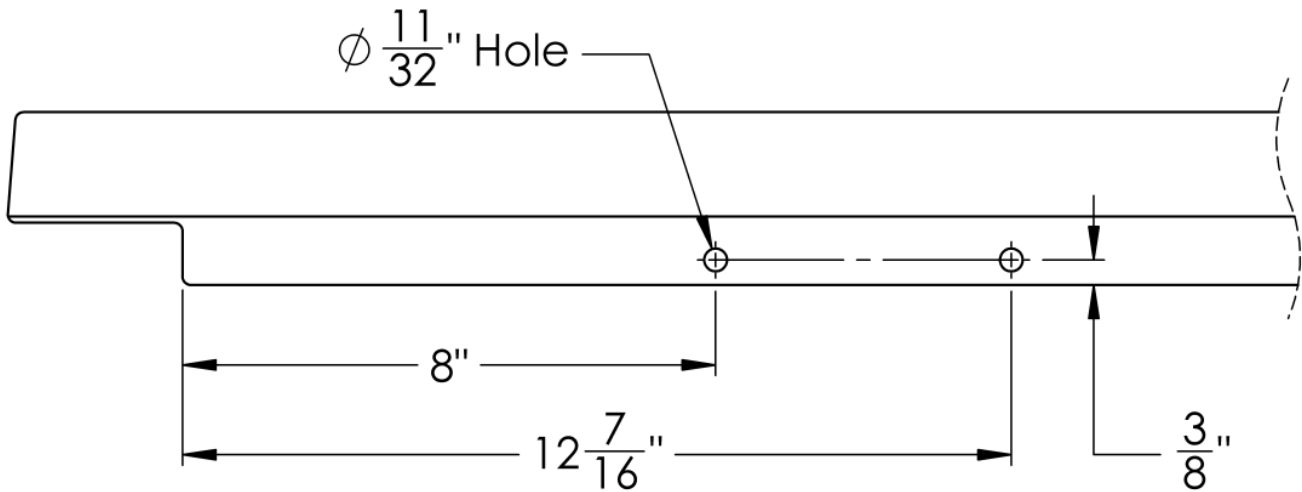


Figure 2: Left side hole locations

STEP 3: Using a tape measure and marking device, mark the two right side hole locations as shown in Figure 3.

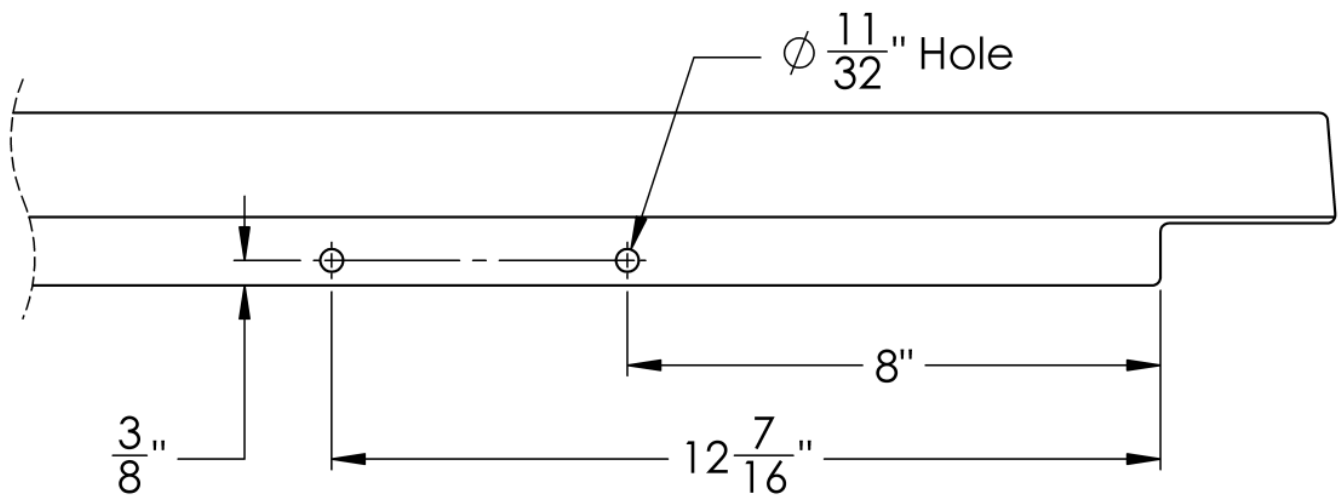


Figure 3: Right side hole locations

INSTALL/REMOVAL INSTRUCTIONS: TAILGATE MOLDING

ATTENTION: Refer to the appropriate shop manual for your vehicle to obtain specific service procedures for this part. If you do not have a service manual or lack the skill to install this part, it is recommended that you seek the services of a qualified technician. Pay special attention to all cautions and warnings included in the shop manual. Read and follow all instructions carefully.

STEP 4: Use the 1 1/32" drill bit and a power drill (a step drill bit is preferred and will yield the best results) and drill the four new holes into the Tailgate Molding.

STEP 5: Deburr the four new holes as necessary and the Tailgate Molding is now ready for installation.